



Changing Edge Detection for Epson TM-C3400 SecureColor Inkjet Printer

Whether you use continuous length or die cut (gap) labels, it is important to ensure that your printer is correctly adjusted for the type of labels you are using. As Digi-Trax customers use different types of labels, our factory standard may not be the setting that is correct for your use. Therefore, to make sure your printer is set correctly for your application, please go to Printer Preferences and then find the “Maintenance and Utilities” tab at the top of the screen.

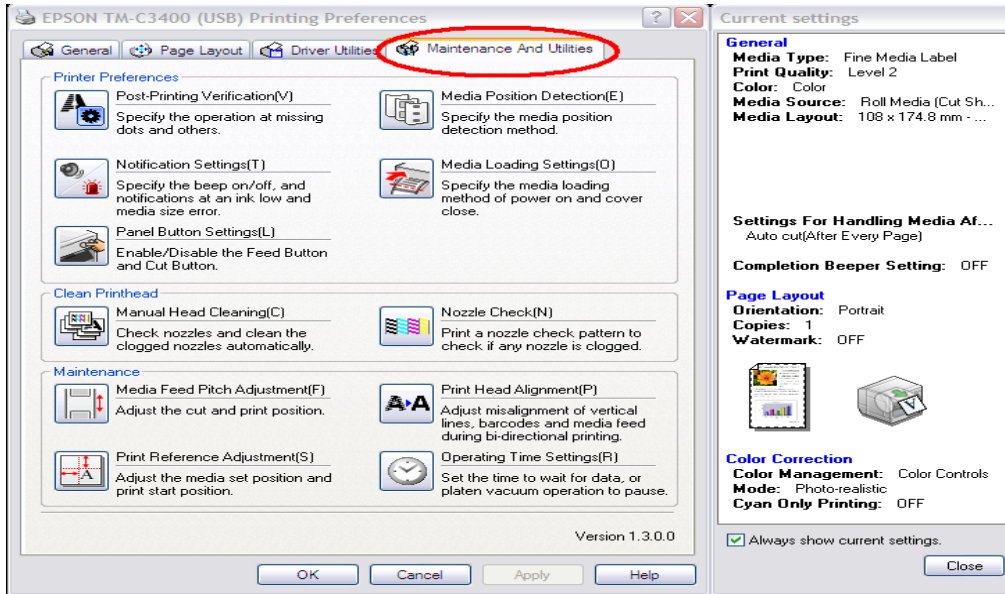

Select “Media Position Detection (E)”

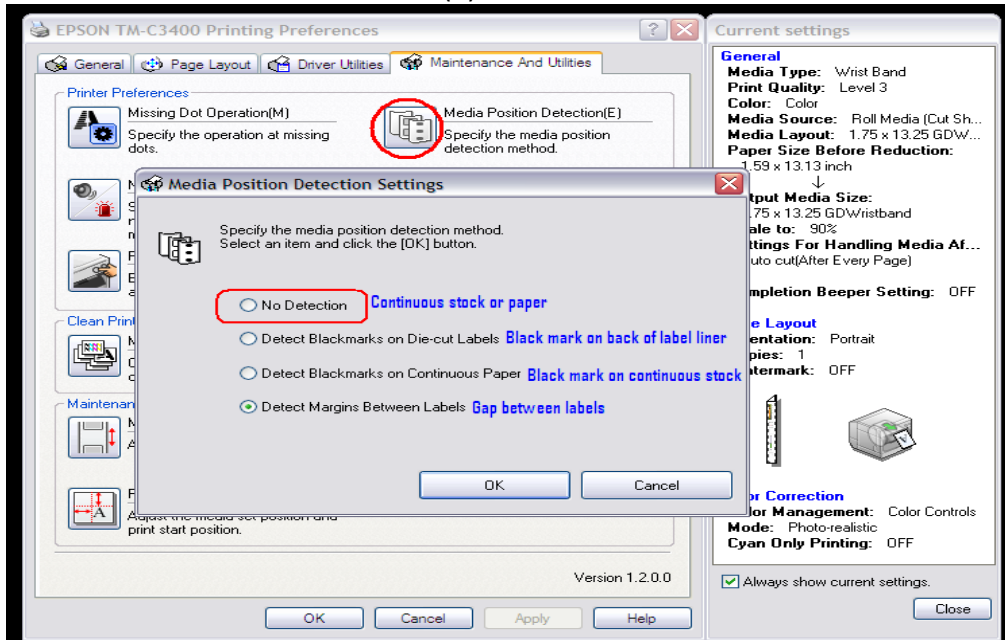

Select your advancement method (continuous, black mark or gap)

Click OK to save your changes

If you have any questions, please contact our Technical Support team at 847-613-2100.